





MODERN  
STAINLESS  
HARDWARE

1

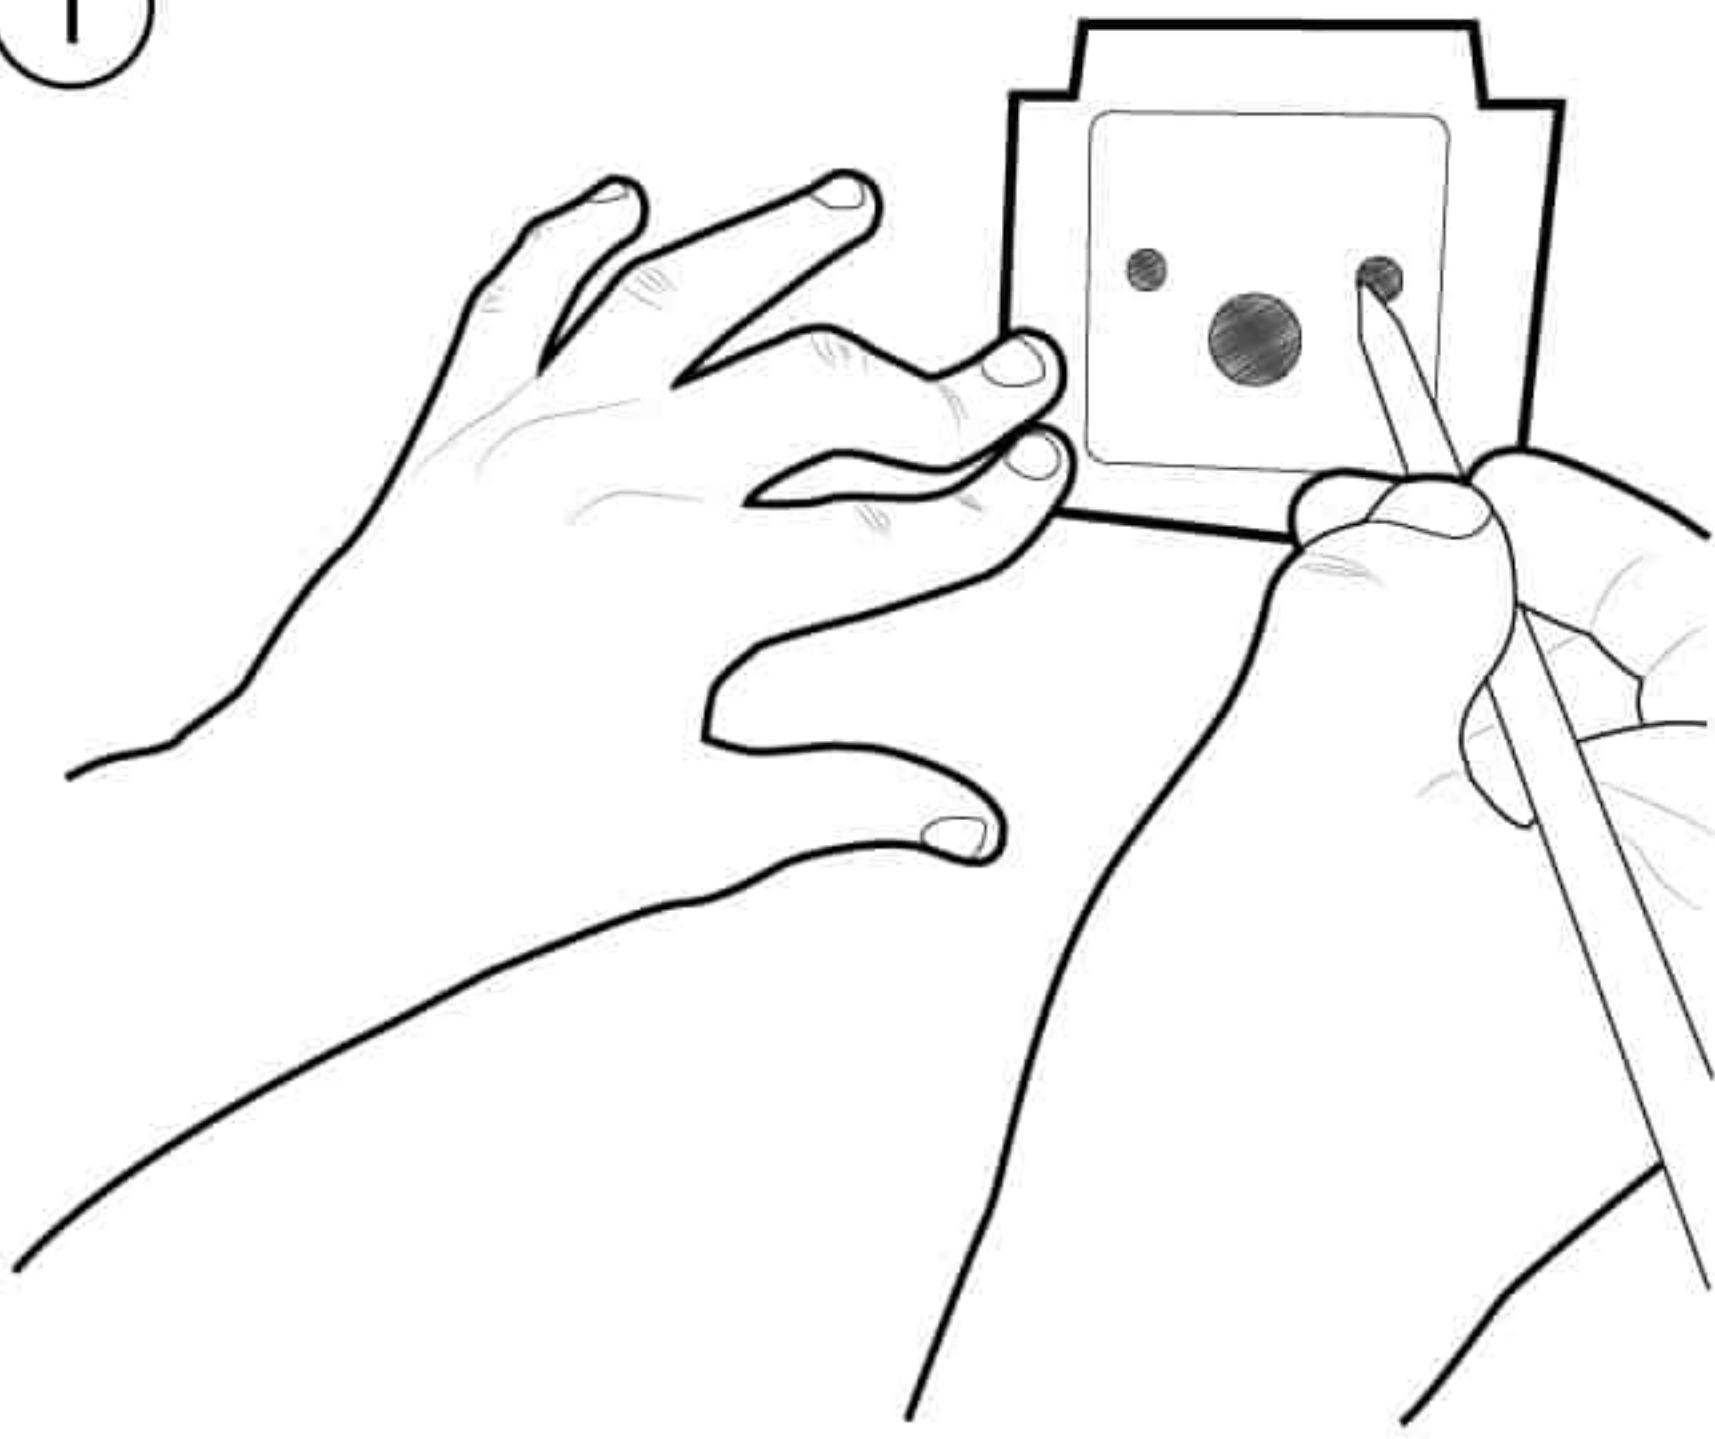


Turn off electrical power to existing doorbell.  
Remove old doorbell button.  
Use template provided to mark hole positions.

2

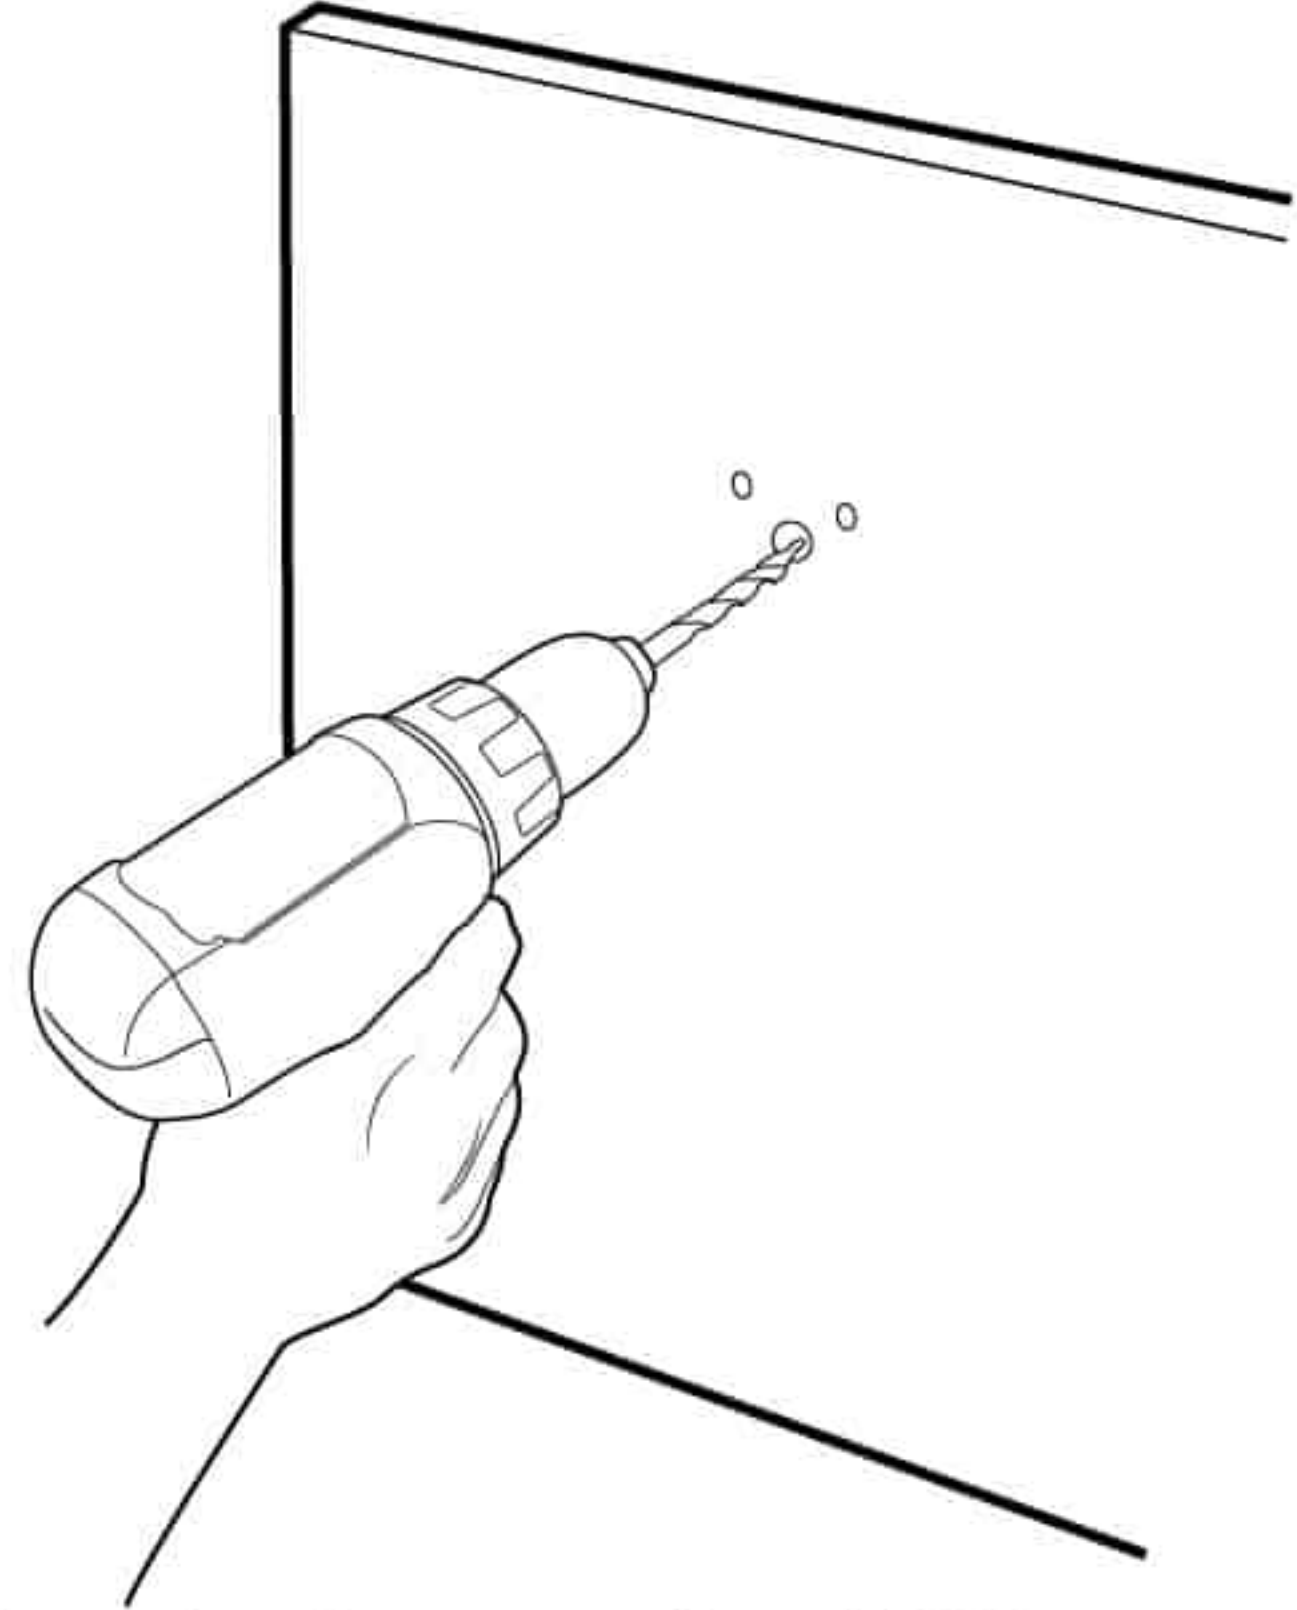


Drill holes using the appropriate drill bit for your surface material

3

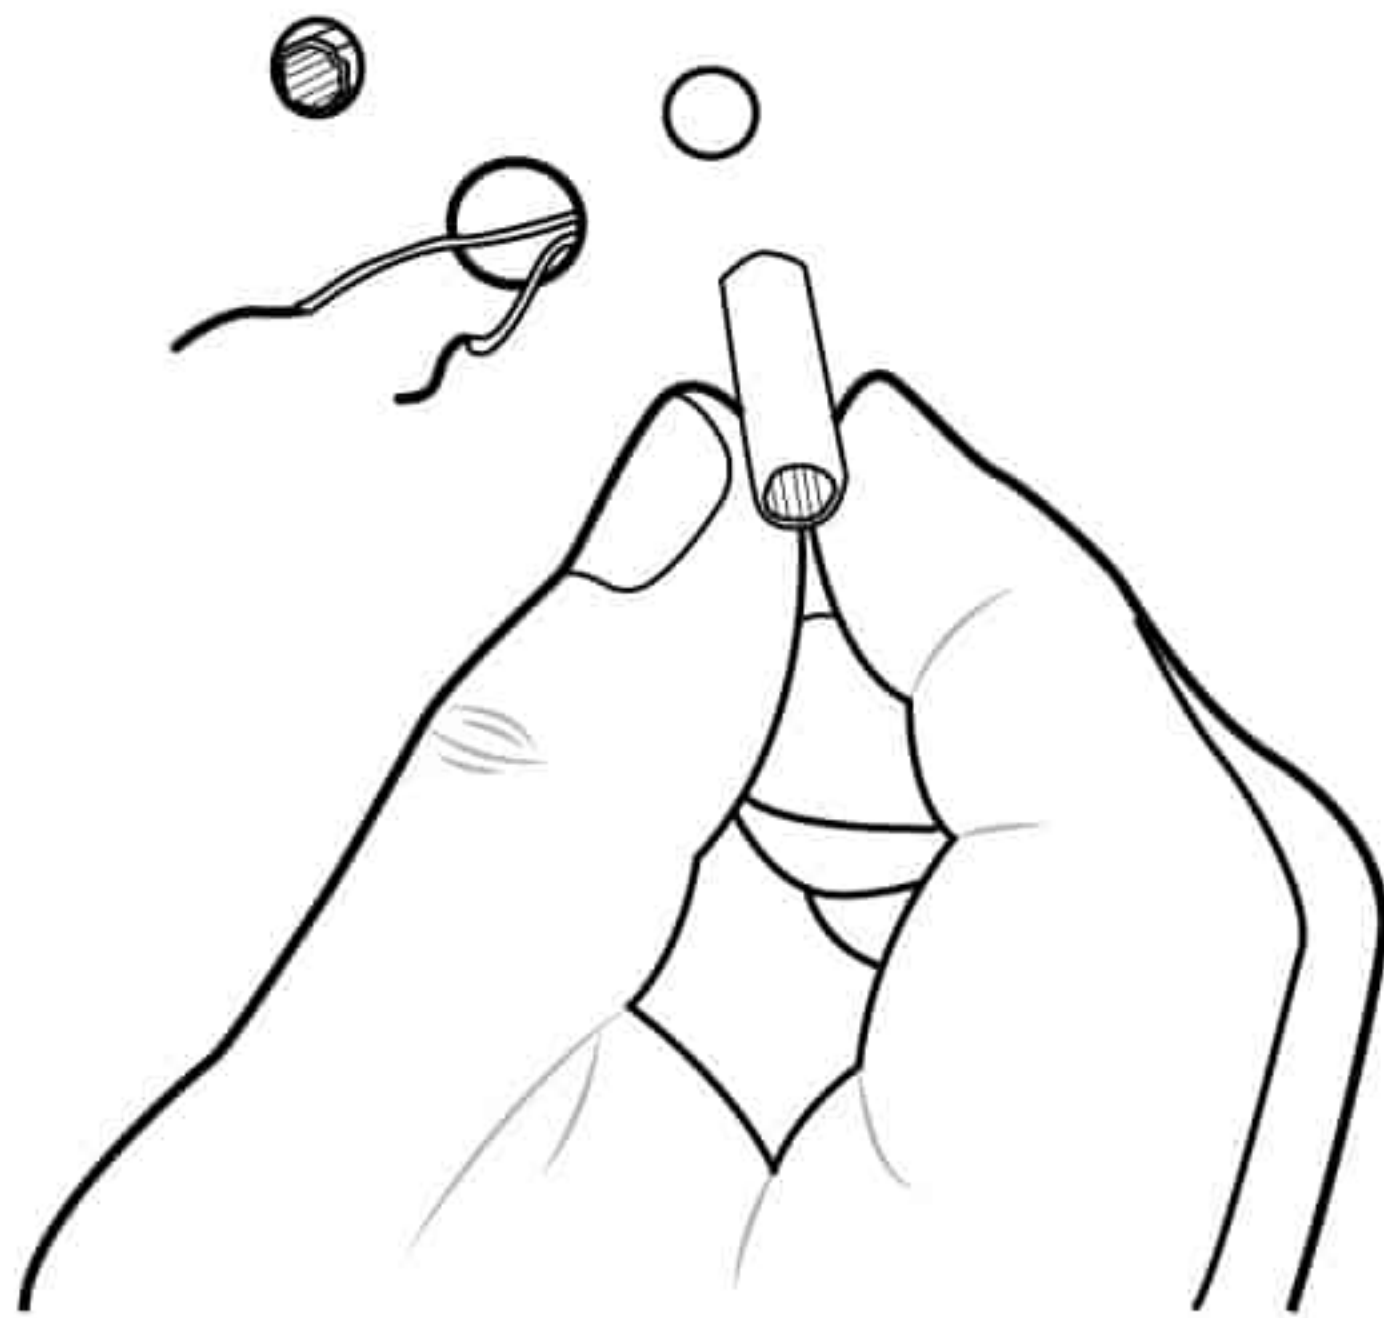


Insert plastic anchors into small holes

4

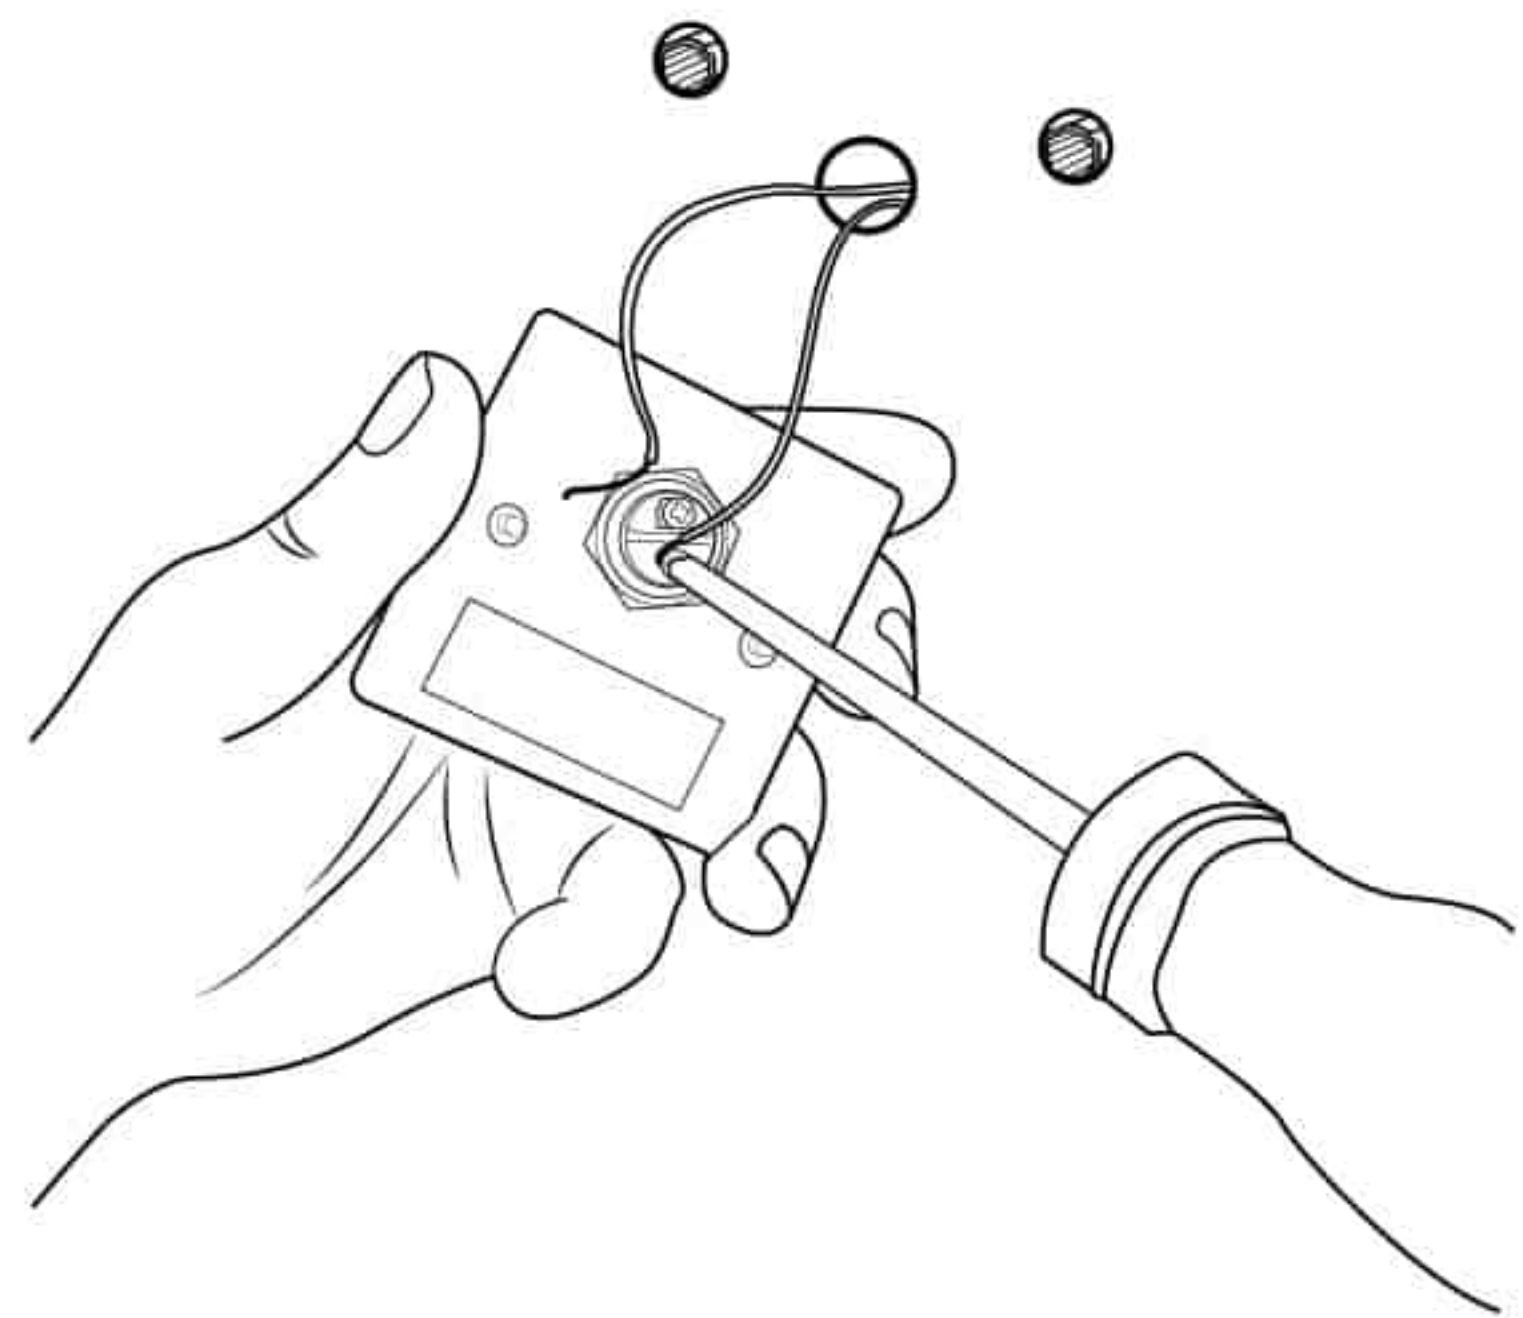


Attach wires to the 2 screw terminals on pushbutton

5

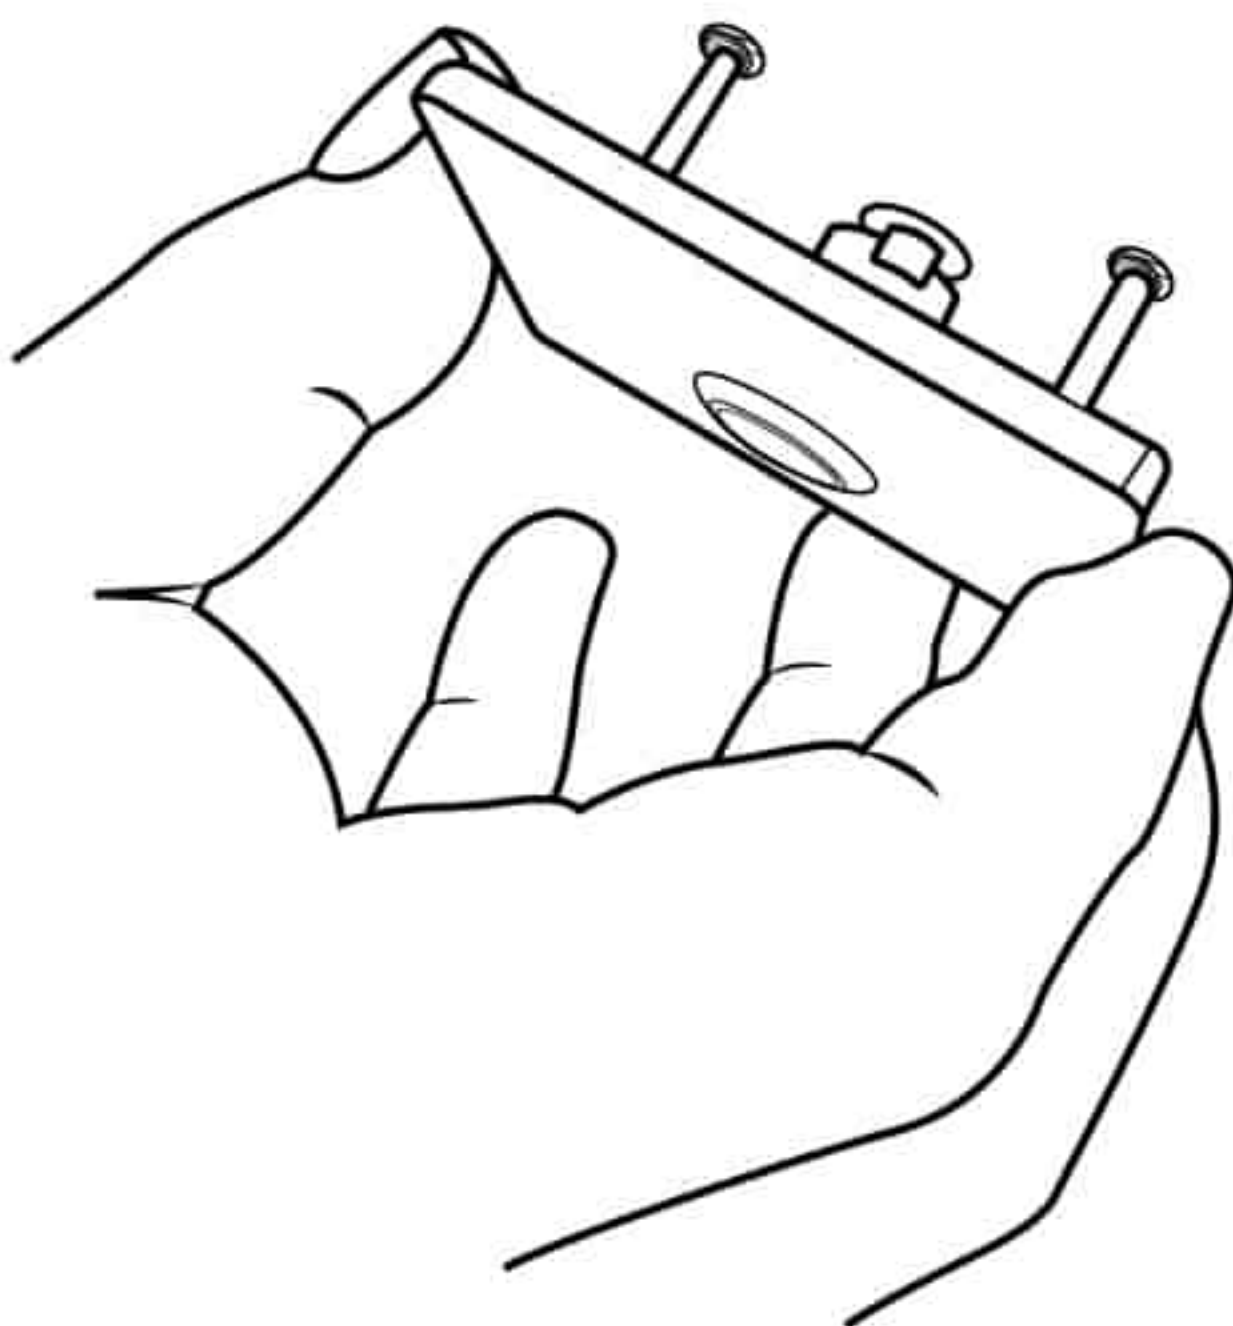

Push posts on back of doorbell into the plastic anchors

6

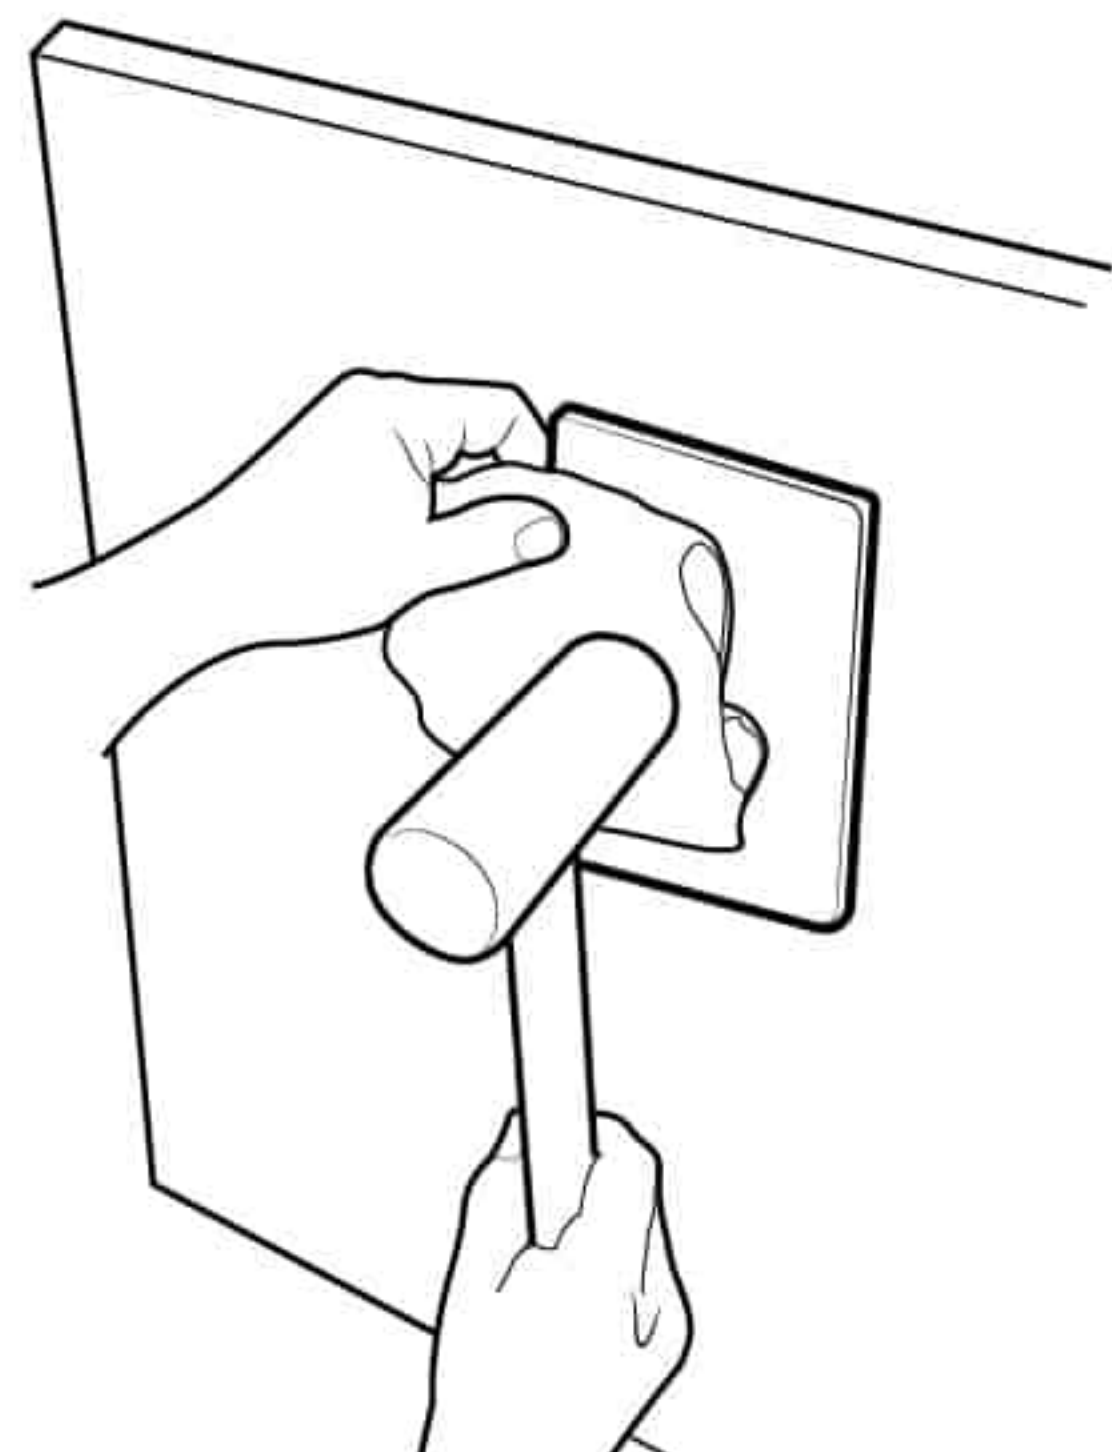

Using a soft cloth to protect the surface of the doorbell, GENTLY tap the posts into the plastic anchors, alternating sides, using a plastic or rubber mallet until doorbell is flat against the mounting surface. DO NOT HIT THE CENTER PUSHBUTTON WITH THE Mallet.